

OBSTA WARNING SPHERES

2x



4x




6x




- 2 x ½ half spheres
- 4 clamps
- 6 nuts

Tools

16




Mounting of the 4 clamps

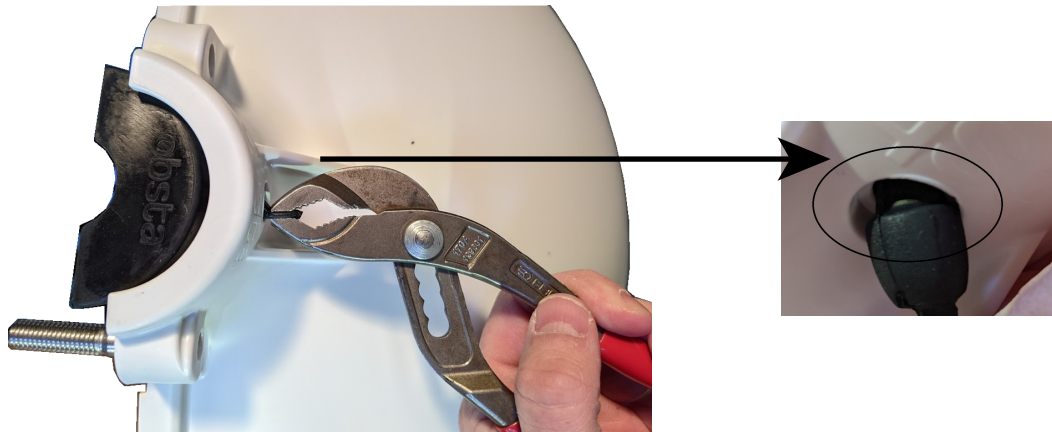

1. Insert the clamp with obsta logo facing outside the sphere
2. Pull and release carefully the teat of the clamp with the pliers, repeat this operation 2-3 times until the teat completely pass the hole of the sphere

Mounting of the sphere

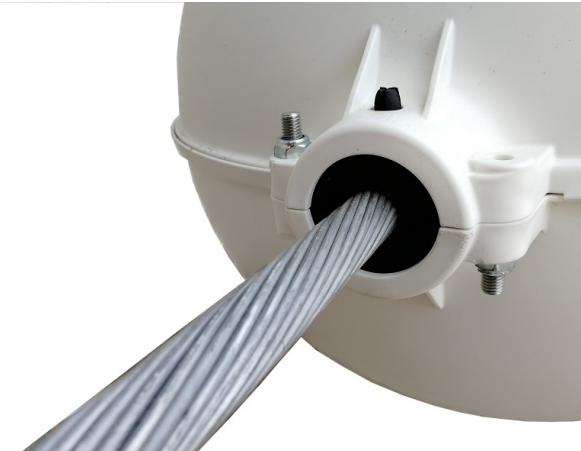

1. Fit the two half spheres together with the cable in place as pictured.
2. Tighten the 6 bolts tu 15 +/-1 Nm, taking care the two half spheres remain in position.
3. Once the bolts are tightened, check that the spheres remain tightly in place.